

W007/4200 BMW R1200/1250 GS/A LC Two-FINGER LEVERS SILVER

July 2023

Why do you want to fit this part?

- To make the use of the front brake and clutch lever more comfortable without pinching your fingers when pulling the clutch.

This part fits on the following motorcycle:

- BMW R1200/1250 GS/A LC

Part list:

- 1 x Two-Finger Front Brake Lever
- 1 x Two-Finger Clutch Lever

Tools needed:

- Torx 25
- 8mm Spanner
- 8mm Drill Bit



Instructions:


Step 1: Loosen the indicated bolt using a Torx 25 tool.



Step 2: Push mirror bracket outwards (see Arrow) in order to get access to the lever bolt.



Step 3: Remove the lever bolt (indicated in white) of the brake lever using a T25 Torx and an 8mm spanner.

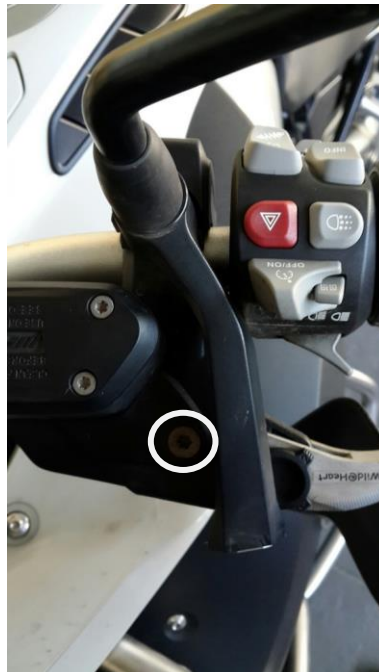


Step 4: Pull the standard lever outwards from the casing.



Step 5: Lightly push the copper bush (indicated in white) out of the hole by using a 8mm drill bit. Ensure not to lose the inside spring.



Step 6: Pull out the Adjuster Knob indicated in white.

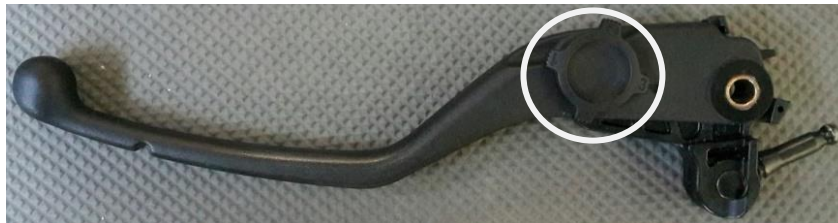

Step 7: Rebuild all the components (re-install the adjuster knob first and set it on no.1) onto the Wild@Heart 2 Finger Lever and re-install onto the motorcycle. Don't forget the spring.

Repeat Steps 1 to 7 for the Brake Lever.

Note: Make sure all bolts are fastened on both sides and that the levers fit properly before riding. Enjoy the trip!

All parts and accessories are fitted at own risk. Wild at Heart Adventure (Pty) Ltd. and the directors do not take any responsibility for any damage or injury due to the fitment or use of the accessories.